

i-SOBOT Action Table

Description of icons

- P** ...Punch button **K** ...Kick button **G** ...Guard button **GO** ...Execute button
- 1** ...1 button **2** ...2 button **3** ...3 button **4** ...4 button
- A** ...A button **B** ...B button **L** ...Left joystick **R** ...Right joystick



For combinations of multiple buttons, input in order from the left.

© 2007 TOMY

Remote control mode

Joystick Control				Punch Actions			Kick Actions			Guard Actions			Common Phrases & Greetings		
No	Action	Input & Movement	LCD	No	Action	Input	LCD	No	Action	Input	LCD	No	Action	Input	LCD
1	Walk Forward	L ↑		19	Punch (L)	1 P		35	Roundhouse (L)	1 K		50	Guard (L)	1 G	
2	Walk Backward	L ↓		20	Punch (R)	2 P		36	Roundhouse (R)	2 K		51	Guard (R)	2 G	
3	Walk Fwd Curve Left	L ↶		21	Backhand (L)	3 P		37	Forward Kick (L)	3 K		52	2-Hand Guard 1	3 G	
4	Walk Fwd Curve Right	L ↷		22	Backhand (R)	4 P		38	Forward Kick (R)	4 K		53	2-Hand Guard 2	4 G	
5	Sidestep Left	L ←		23	One-Two Punch (R)	1 2 P		39	Side Kick (L)	1 1 K		54	Dodge Left	1 1 G	
6	Sidestep Right	L →		24	One-Two Punch (L)	2 1 P		40	Side Kick (R)	2 2 K		55	Dodge Right	2 2 G	
7	Walk Bkwd Curve Left	L ↶		25	Chop (L)	1 1 P		41	Back Kick (L)	3 3 K		56	Duck	3 3 G	
8	Walk Bkwd Curve Right	L ↷		26	Chop (R)	2 2 P		42	Back Kick (R)	4 4 K		57	Sway Back	4 4 G	
9	Rotate Fwd Clockwise	L ↻ R ←		27	Double Chop	3 3 P		43	Roundhouse (L & R)	1 2 K		58	Up-sweep Block	1 2 G	
10	Rotate Fwd Counter-CW	L ↻ R →		28	Upper Chop	4 4 P		44	Fwd Kick (L & R)	2 1 K		59	Splits 2	3 4 G	
11	Rotate Bkwd Clockwise	L ↻ R ←		29	Combo Punch	1 2 3 4 P		45	Combo Kick	1 2 3 4 K		60	Combo Guard	1 2 3 4 G	
12	Rotate Bkwd Counter-CW	L ↻ R →		30	Side Chop (L)	1 4 P		46	High Kick (L)	2 4 K		Stand up from a Prone Position 61 Stand up (if face down) A 62 Stand up (if face up) B *Do not use Actions 61 & 62 unless i-SOBOT is lying down as noted. If used when standing, i-SOBOT will fall abruptly, risking damage.*			
13	Move Arms	R button + L R		31	Side Chop (R)	2 3 P		47	High Kick (R)	1 3 K					
14	Lock/Unlock Arms	L button (R button + L R)		32	Slapping	4 3 P		48	Splits 1	3 4 K		Utility Action 49 Zero Position 4 4 4 B *Action 49 is normally used only for maintenance*			
15	Turn Head Left	R ←		Programming Pause			3 Second Pause 4 4 4 A *Action 49 is normally used only for maintenance*								
16	Turn Head Right	R →		33	Double Backhand	3 4 P					Common Phrases & Greetings 63 Affirm 1 A 64 Disagree 4 A 65 Good Morning 1 2 A 66 Greet 1 1 3 A 67 Greet 2 2 1 A 68 Greet 3 2 2 A 69 Greet 4 2 3 A 70 Bye 1 3 1 A 71 Bye 2 3 2 A 72 Bye 3 3 3 A 73 Bye 4 3 4 A 74 Bye 5 1 4 A 75 Respect 1 1 A 76 Thanks 1 4 1 A 77 Thanks 2 4 2 A 78 Love 1 1 1 1 A 79 Love 2 2 2 2 A 80 Love 3 3 3 3 A				
17	Lean Forward	R ↑		Common Phrases & Greetings 74 Bye 5 1 4 A 75 Respect 1 1 A 76 Thanks 1 4 1 A 77 Thanks 2 4 2 A 78 Love 1 1 1 1 A 79 Love 2 2 2 2 A 80 Love 3 3 3 3 A											
18	Lean Backward	R ↓													

i-SOBOT Action Table

Description of icons

- P** ...Punch button **K** ...Kick button **G** ...Guard button **GO** ...Execute button
- 1** ...1 button **2** ...2 button **3** ...3 button **4** ...4 button
- A** ...A button **B** ...B button **L** ...Left joystick **R** ...Right joystick



For combinations of multiple buttons, input in order from the left.

Remote Control Mode (cont.)

Special Action Mode

Voice Control Mode

Emotional Actions				Showcase Actions			Showcase Actions (cont.)			No	Action	Input	LCD	No	Voice Command	Action	LCD		
81	Excited 1	1 4 B		97	Hide N Seek	3 1 B		114	Lift	2 2 2 B		130	Forward Somersault	A GO		148	Go Forward	Walks Forward	
82	Excited 2	2 1 B		98	You Like?	1 2 4 A		115	Count on Me	2 2 4 B		131	Headstand Exercises	B GO		149	Turn Left	Rotates Left	
83	Excited 3	2 2 B		99	We Are the Robots	1 3 1 A		116	Articulation	2 3 1 B		132	Excercises	A B GO		150	Turn Right	Rotates Right	
84	Excited 4	1 2 2 B		100	Tipsy	1 3 2 A		117	Show Off 1	2 3 2 B		133	Air Drum	A A A GO		151	Back up	Steps back	
85	Party	1 3 B		101	Tickle Me i-SOBOT	1 4 1 B		118	Show Off 2	2 3 3 B		134	Air Guitar	B B B GO		152	Action Start	Special Performance	
86	Amazed	1 2 4 B		102	Tired Feet	1 4 2 B		119	Show Off 3	2 3 4 B		135	Random performance	B A B GO		153	How are you?	Appropriate Response	
87	Regret 1	2 4 B		103	Need a Break	1 4 3 B		120	Show Off 4	2 4 1 B		136	Banzai! Japan Cheer 1	B A B GO		154	What's up?	Appropriate Response	
88	Regret 2	3 3 B		104	Wave 1	1 4 4 B		121	Comin' Through	2 4 2 B		137	Japan Cheer 2	B A B GO		155	i-SOBOT	Appropriate Response	
89	Regret 3	3 4 B		105	Wave 2	2 1 1 B		122	Catch	2 3 B		138	Randomly imitates an animal	B A B GO		156	Look out!	Appropriate Response	
90	Worry	3 2 B		106	Applause	1 3 3 B		123	Pose 1	4 1 1 A		139	Dog	A B B GO		157	Make me laugh	Appropriate Response	
91	Pain 1	4 2 B		107	I'm So Excited	1 1 4 B		124	Pose 2	4 1 2 A		140	Cat	A B B GO					
92	Pain 2	4 4 B		108	Too Sexy	2 1 2 B		125	Pose 3	4 1 3 A		141	Eagle	A B B GO					
93	Beg 1	4 1 B		109	Clink	2 1 3 B		Mystery Actions			142	Gorilla	A B B GO						
94	Beg 2	1 1 3 B		110	Relax	2 2 1 B		126	Mystery 1	1 2 3 B		143	Tropical Dance	B B A GO					
95	Merry	1 2 1 B		111	Soccer 1	2 2 3 B		127	Mystery 2	1 3 1 B		144	Giant Robot	A B A GO					
96	Hilarious	1 3 4 B		112	Soccer 2	4 2 K		128	Mystery 3	1 3 2 B		145	Western Movie Scene	A B A B GO					
				113	Soccer 3	3 1 K		129	Mystery 4	4 3 B		146	Random Performance	A A A A GO					
										147	Martial Arts Tai Chi	A A A A GO							

Actions 126-129 have no sound.